



41408 EQUALIZER

Dimensions shown as Width x Depth x Height. Specifications are correct at time of printing and are subject to change without notice.
LHF - left hand facing RHF - right hand facing IA - inside arm to inside arm For SKU options: R=Manual Recline, E=Power Recline



1R Manual Recliner
39 x 42 x 42"
99 x 107 x 107cm
IA: 23" / 58cm



2R LHF Arm, Man
Recliner
31 x 42 x 42"
79 x 107 x 107cm



3R RHF Arm, Man
Recliner
31 x 42 x 42"
79 x 107 x 107cm



4R Armless Loveseat
Man Recl
47 x 42 x 42"
119 x 107 x 107cm



5R LHF Arm, RHF
Wedge, Man Recl
48 x 42 x 42"
122 x 107 x 107cm
IA: 23" / 58cm



6R RHF Arm, LHF
Wedge, Man Recl
48 x 42 x 42"
122 x 107 x 107cm
IA: 23" / 58cm




7R RHF Wedge, Man
Recliner
40 x 42 x 42"
102 x 107 x 107cm



8R Armless Manual
Recliner
23 x 42 x 42"
58 x 107 x 107cm



9R LHF Wedge, Man
Recliner
40 x 42 x 42"
102 x 107 x 107cm

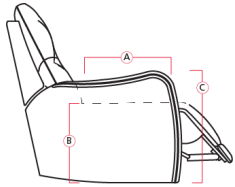

Dimensions

- A - Seat Depth - 22" / 56cm
- B - Seat Height - 21" / 53cm
- C - Arm Height - 26" / 66cm

Features

- Hardwood, softwood and engineered wood products; all joints pinned & glued for uniformity & strength
- Back filled with blown fibre
- Chaise styling for ultimate comfort and support in full recline
- Back: 11 or 12 gauge sinuous springs which are engineered to provide lasting comfort and strength
- Seat: 8 gauge sinuous wire springs for superior ride and comfort
- Seat Fill - 1.8 lb high resilience foam for superior comfort without loss of support
- Inside Latch for manual operation
- D-pull for manual operation of armless skus
- Toggle Switch for power operation
- LED cupholder switch for power operation
- Touch button for power operation

Options

- Stainless Steel Cupholder
- Antique Cupholder
- LED cupholder with groundlighting
- Tray tables
- Wireless Bass Shaker
- Grommet only option available

Battery packs are not recommended for use with LED/USB options.



41408 EQUALIZER

Popular Configurations

Note: Always assemble configurations from right hand facing to left hand facing components.

How We Measure

Height - measured from the highest point of the back pillow to the floor.

Depth - measured from the front edge of the seat cushion to the top of the back.

Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.

Arm Height - measured from the top of the arm to the floor.

Seat Height - measured from the crown of the seat cushion to the floor.

Warranty


Wood Frames, Springs or Webbing - ten year warranty

Metal Frames - two year warranty under normal household use


Motion Reclining Mechanisms - seven year warranty

Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty


Seat Cushion Foam and Fibre-filled Components - five year pro-rated warranty

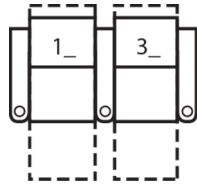


2 Seats Straight Configuration
70 x 70"
178 x 178cm

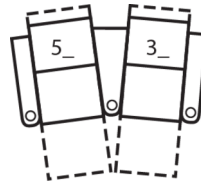


2 Seats Curved Configuration
79 x 72"
201 x 183cm

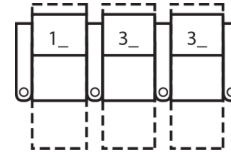


3 Seats Straight Configuration
102 x 70"
259 x 178cm

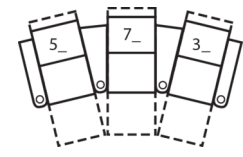


3 Seats Curved Configuration
118 x 75"
300 x 191cm




4 Seats Straight Configuration
133 x 70"
338 x 178cm




4 Seats Curved Configuration
154 x 82"
391 x 208cm




4 Seats Straight Configuration
125 x 70"
318 x 178cm

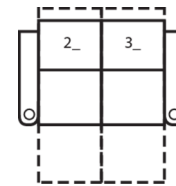

2 SEATS STRAIGHT (2_/3_)
63 x 70"
160 x 178cm

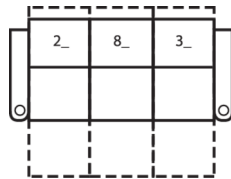

3 SEAT STRAIGHT (2_/8_/3_)
86 x 70"
218 x 178cm

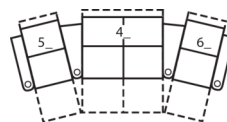

4 Seat Curved Configuration
141 x 76"
358 x 193cm